



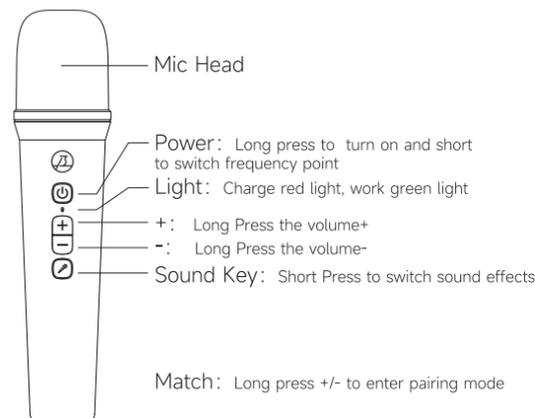


A5

Product Introduction

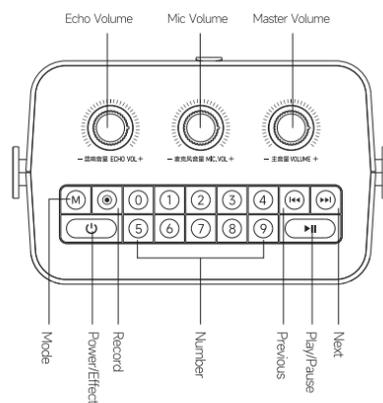

Specifications

Output Power	≤30W	Frequency Range	60HZ-18KHZ
Battery Model	7.4V/2200mAh	SNR	≥70DB
Charging Voltage	5V-2A	Bluetooth	≈20m
Charging Time	3-4hours	Play Time	3-4hours

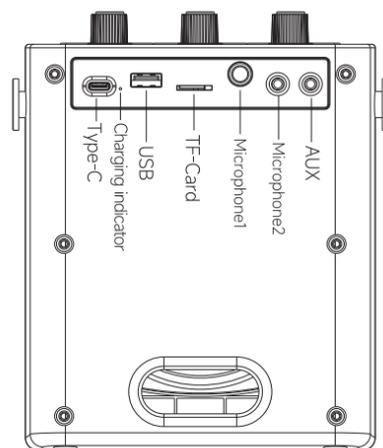

Operation Manual 使用说明书



WWW.SAINTLARK.COM

Instructions

- Power on** press and hold the power button for 3 seconds in the off state
- Power off** press and hold the power button for 3 seconds in the power-on state
- Bluetooth mode** short press m key to enter bluetooth mode
- Clear bluetooth pairing** press and hold the pause key
- Mode switch** short press m key to switch
- Wireless mode** Long press M key to enter pairing mode
- Wired microphone** Insert 3.5 socket
- Aux mode** Insert AUX to switch automatically
- Tf card mode** Insert TF card to switch automatically
- U disk mode** Insert U disk to switch automatically
- Play/pause** Short press Play/Pause key
- Previous** Short press "-" key
- Next** Short press "+" key
- Music volume +** Music volume knob rotates clockwise
- Music volume -** Music volume knob rotates counterclockwise
- Charge** Plug the power adapter into the Type-C port
- Microphone volume +** Microphone volume knob rotates clockwise
- Microphone volume -** Microphone volume knob rotates counterclockwise
- Mic reverberation +** Microphone reverb knob rotates clockwise
- Mic reverberation -** Microphone reverb knob rotates counterclockwise

Application Notice

- In order to achieve the best effect of microphone sound reinforcement, please place the microphone 1-2cm in front of the mouth and aim at the microphone to pronounce. If there is a howl, you can appropriately reduce the volume or slightly extend the distance between the machine and the microphone to prevent mutual interference;
 - Try to avoid plugging and unplugging the microphone socket frequently to avoid loose socket and poor contact. Do not plug the microphone and sound source incorrectly;
 - To ensure the service life of the lithium battery, it is recommended to recharge after use. Frequent charging will accelerate the aging of the battery chip. If it is not used for a long time, it should be charged every two months;
 - Due to the strong magnetism of the horn, it is not allowed to put the machine and bank card and other magnetic things together to avoid unnecessary trouble caused by magnetic loss;
 - All parts of this product are designed according to the working requirements of this machine. If you need to replace parts, try to use our original parts to achieve the best working condition;
 - This product may become slightly hot during charging and normal use, which is a dry normal phenomenon;
 - Please use an anti-static soft cloth to clean this product. Please turn off the power switch and disconnect all external connections before cleaning this product. Do not wipe with chemical substances (such as alcohol, benzene and other chemical lotions or abrasive cleaning agents);
 - Do not drop, throw or step on this product. Do not disassemble this product without authorization, or you will not enjoy our free warranty service.
- Self resolution of common problems:**
- When the switch is turned on, there is no sound from the speaker**
A. The screen light is not on, the power supply is dead, and the charging problem is solved.
B. The volume adjustment is in the minimum position, and the volume is adjusted appropriately
 - The speaker has obvious howling**
A. Aim the microphone at the corner of the mouth, and keep the microphone 2-3m away from the host;
B. When the space becomes small, the volume should be properly turned down to avoid howling.
- If you still have the above problems, please contact SAINTLARK after-sales customer service.

Safety Caution

- Do not put the product and accessories near the fire source or any overheated environment.
- Do not touch the product and accessories with water and moisture, do not use the equipment near water, and do not immerse the product in any liquid to prevent the product and accessories from being subjected to water drops or splashes.
- Do not open or disassemble or repair the battery module by yourself. If the battery is replaced improperly, there will be an explosion hazard. Do not put the battery into water, fire or any overheated environment.
- This product is used after being charged by an external power adapter (5V-2A). After charging, it can be conveniently disconnected from the power grid by unplugging the power adapter plug.
- When the user does not use this product temporarily, please turn the power switch of the product to the off state to turn off the power (see the product control diagram) to avoid the loss of battery power.
- When the use of wireless devices is prohibited or the use of devices will cause interference and security risks to electronic devices, please turn off this product.
- In flammable and explosive areas, please close this product and follow the relevant instructions to avoid bow explosion or fire. Flammable and explosive areas include, but are not limited to, gas stations, transportation and storage facilities for flammable or chemical products, areas with explosion hazard signs, and areas with the sign "Turn off two-way radio equipment".
- Please abide by the relevant regulations and rules of the airline when taking the plane, and close this product before the plane takes off to avoid potential safety hazards.
- It is only suitable for safe use in non tropical climate conditions and in areas below 2000 meters above sea level.

SHENZHEN SAINTLARK TECHNOLOGY CO.LTD CMIIT ID: 2022DP12458
 6th Floor, Building A, Zhaofeng Industrial Park,
 Hangkong Road, Baoan District, Shenzhen
 Tel. 400 998 8038 www.saintlark.com

